



ThermoSafe 040 on the floor:

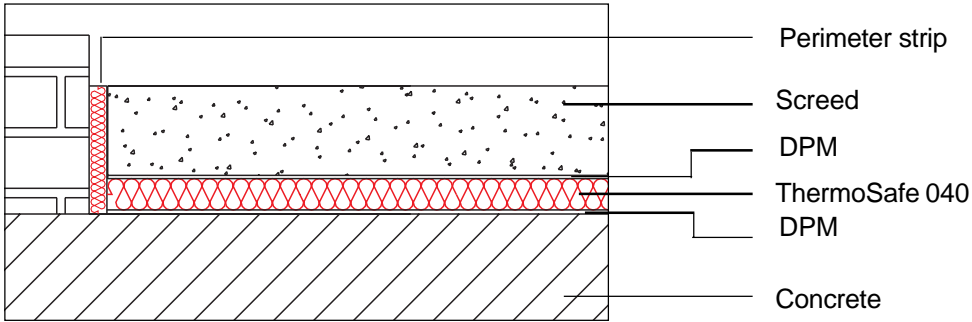

Laying pattern:

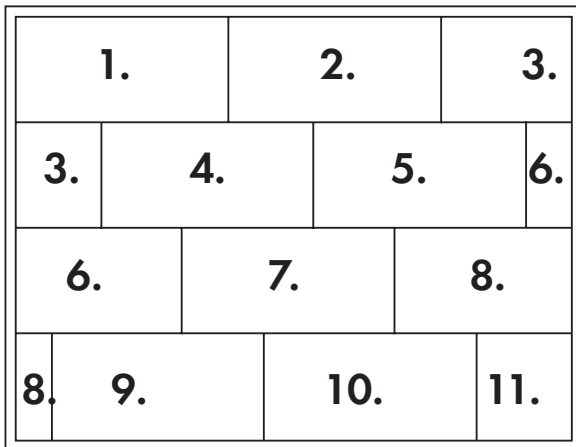

Stagger Joints when installing more than one layer

